



SENSOR SEARCH FUNCTION


In the service console, different features can be chosen for scanning for boat codes, channels and noise.

Press to  enter the Configuration screen.



1. Select the Service sheet. 

2. Press Console. 

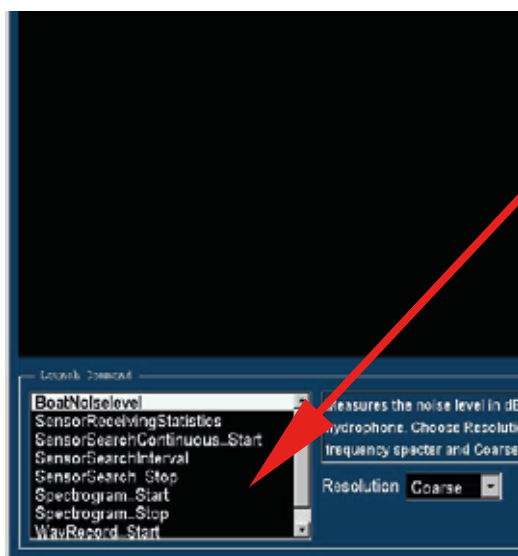

Different features can be run for doing different tests on the system. The command is picked from the list and started by clicking "Run".


Some commands has settings that can be set according to how you want it. See the most important ones described on the next pages.

SENSOR SEARCH FUNCTION

SensorSearchCont_Start

This Feature can be very helpful when searching for the boat code and channel for a sensor. It can also be used to check the boat code and channels for interfering sensors. The SNR value gives an indication of the signal strength.

As soon as a signal is received, it will be shown in the text window with boat code and channel. The time since last received signal in the same frequency will also be shown. SNR means Signal Noise Ratio and gives the intensity of the received signal.

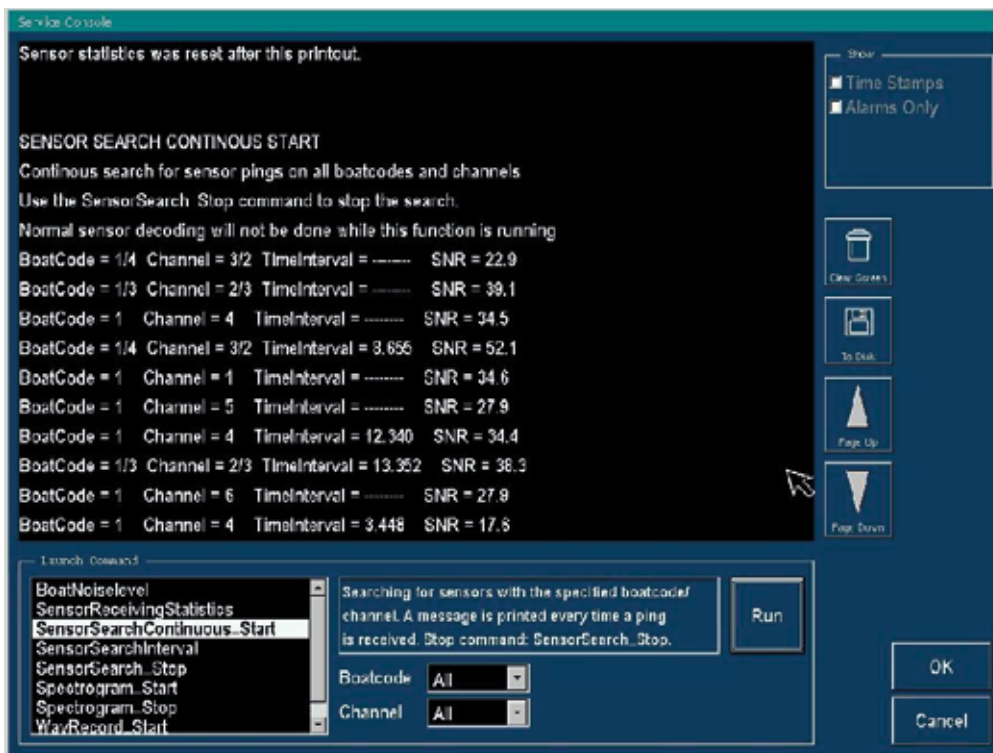

It is very important to run the **SensorSearch_Stop** command, normal sensor reception will not be resumed until this command has been run.