
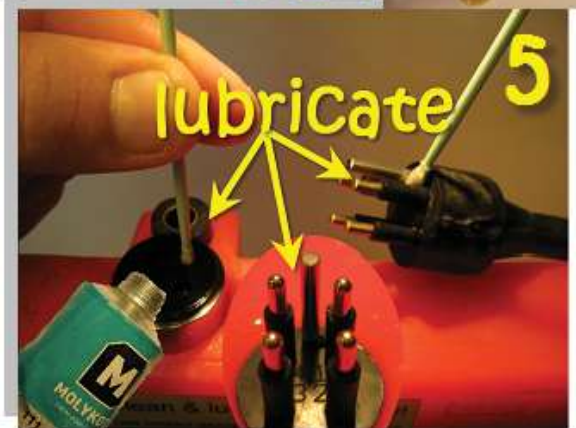


Trawl Eye – weekly cleaning & lubricating procedure

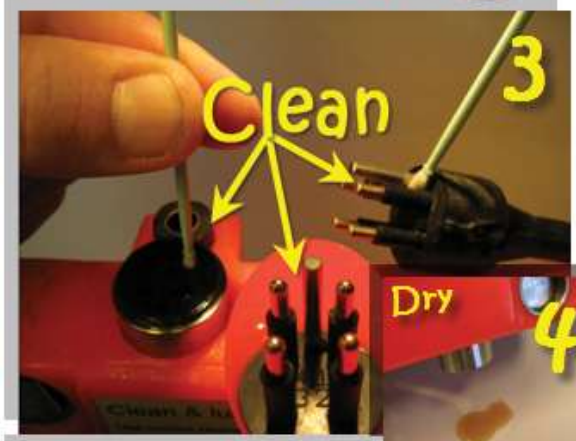

1. Use **Molycote S-1002*** electrical contact cleaner with tube installed and spray the cleaner on the connectors (Trawl Eye battery and charger). Fill the holes completely in the battery connector.

2. Allow to soak for 1-2 minutes.

3. Manually scrub the contacts with the foam tip and remove contaminants and dirty silicone.

Do not use Q-tips (cotton swab)!

Using Q-tips may result in small cotton fibers inside the connectors, which will lead to leakage and corrosion.

4. Shake/drip out remaining fluid and allow to drying. Use compressed air if available. Inspect the connectors. If not clean, repeat step 1 to 4.

Lubricate with **Molycote 111 Compound**.

Use a clean foam tip to apply a thin layer into the holes and on the pins (battery, Trawl Eye and charger).

* **Note:** Due to transport restrictions, the contact cleaner (Molekote S-1002 from Dow Corning) should be bought from a local dealer. The contact cleaner can in special cases be ordered from Scanmar, but with a very high transportation cost.